

Wood Repair BASIC Kit

For Knot Filler application

Basic Wood Repair Kit with gun and Knot Filler.

This kit is well suited for the window installer, floor installer, carpenter, maintenance worker, etc.

Single colors and mixed bags are available in aluminum bags with 8 sticks of 150mm per bag.

For successful repairs you need a piece of metal for cooling down the Knot Filler and a sharp chisel for cutting away excess Knot Filler before sanding.

Our special-developed Knot Filler tools are available for purchase at the Wood Repair distributor in your area.

- 1x Plastic suitcase
- 1x BCD 180 Knot Filler gun
- 1x Knot Filler compact bag (8 sticks, 150mm, Ø12mm)
 Mix Pack 1 (Knot, Pine, Oak, Mahogany)



Instructions:

- 1) Put a Knot Filler stick in the preheated Knot Filler gun (170 °C).
- 2) "Shoot" the Knot Filler into the knot/defect.
- 3) Place a piece of metal on the Knot Filler and let it cool down.
- 4) Cut off excess Knot Filler with a chisel.
- 5) Sand the repair and apply surface treatment.
- 5) When the knot/defect has been repaired you can aftertreat with any surface treatment, i.e. oil, lacquer, stain, paint, etc.

Content:



BCD 180 Knot Filler gun

Basic 80W Knot Filler gun for Ø12 mm sticks.

Suitable for carpenters, service people, DIY'ers etc.



Mix Pack 1

Knot Filler Compact Bag

Knot Filler Compact Bags come in a variety of different colors plus two different mix bags.

The Knot Filler sticks are 150mm long and has a diameter of Ø12mm.

8 sticks per bag.